



Table Top Freezer BD40F INSTRUCTION MANUAL

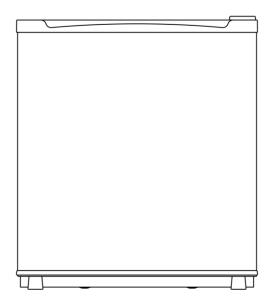

Please read manual before use & keep for future reference

Table of Contents

Freezer Overview	3
Unpacking your appliance	4
Setting up your appliance	4-5
Specifications	5
Temperature control & adjustment	5-6
Hints & Tips	6
Defrosting & cleaning your freezer	7
Notes	7
Additional Information	7
Warranty	7
Spare Parts	7 & 8
Recycling	8

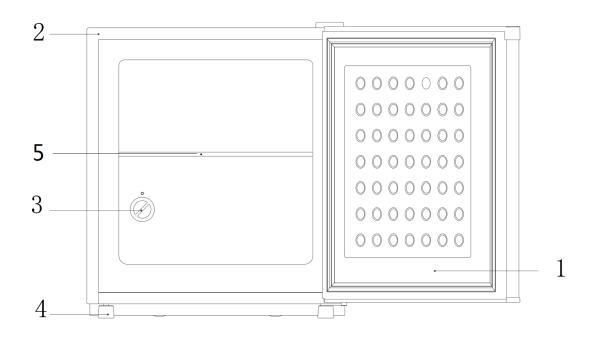

- 1) Freezer Door
- 2) Freezer housing
- 3) Thermostat control dial
- 4) Height adjustable legs.
- 5) Wire shelf

Unpacking your appliance

Make sure that the appliance is in the upright position as per markings on box.

Cut off the packing band, and then lift up the cardboard outer box over the appliance.

Remove packaging from under the appliance.

Remove packing tape from inside the appliance.

Always dispose of packaging as per recycling guidelines.

Setting up your appliance

Place the appliance away from the direct sunlight and sources of heat.

The appliance should be placed on a flat and solid surface. Use the adjustable feet where necessary to make sure the freezer is level.

It is necessary to leave a distance of at least 100mm of space from the back and sides of the unit to allow the proper ventilation of the compressor.

This appliance is designed to be freestanding & should not be built-in.

Never handle the appliance by the power cable as this will damage the appliance. Always remove plug from socket in the correct manner.

If you need to extend the power supply cable, only use a qualified electrician. Do not use an extension lead.

Never allow the body of the freezer to rest on the power cable.

Allow 24 hours after installation before using.

This appliance is intended to be used at ambient temperatures ranging from 16 to 43 degrees Celsius.

Your appliance is designed to operate in the ambient temperature intervals stated in the associated standards, according to the climate class stated on the information label. We do not recommend operating your appliance out of stated temperatures, value limits in terms of cooling effectiveness.

Specifications

Energy efficiency performance rating: E Energy consumption: 148 kWh/annum Net Freezer Capacity: 35L Airborne acoustical noise emissions (dB(A) re 1 pW) 41 Compartments x 1 Removeable wire shelf x 1 Reversible Door Adjustable thermostat Adjustable thermostat Dimensions (CMs): (H)485 x (W)475 x (D)450 Voltage: 220 – 240V Frequency: 50Hz


Temperature Control and Adjustment

The temperature can be adjusted by adjusting the temperature control dial as per diagram below. The higher figure means the lower temperature. The optimum setting is between 4 and 6.

The storage temperature inside the freezer is 0°C. When the food needs be quickly frozen, turn the dial to "7" clockwise and at this moment, the compressor will work continuously. Ensure to return the appliance to the optimum setting to save energy.

After frozen, turn back the dial to the original position. Do not turn the temperature control knob clockwise from "7" to "1".

The optimum temperature for your appliance is -18 Degrees Celsius.

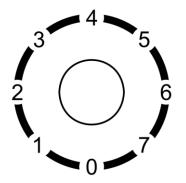

Hints for tips on how to store items efficiently in your freezer:

The optimum temperature for your freezer is -18° Celsius.

Before freezing, wrap & seal fresh food using the following: Aluminum foil, plastic film, Ziplock bags or airtight containers with lids.

For more efficient freezing & thawing, divide food into smaller portions.

It is recommended to put labels & dates on frozen foods. This will help identify foods & to know when they should be used before compromising quality thus reducing food waste.

Never put warm or hot food in your appliance.

Fresh foods should only be frozen when fresh so as not to compromise quality.

Always observe frozen food manufacturer best before dates when in your freezer.

Do not place bottles or cans in your freezer.

Do not re-freeze defrosted food. If frozen food has defrosted it can be cooked & re-frozen after it cools.

Do not leave the door to your appliance open unnecessarily.

Do not overload your freezer with food.

Your freezer is most efficient when full.

Meat, poultry & fish should be stored on the bottom shelf of your freezer & should be separated from non-meat items.

Fruit & veg. should be placed at the top of the freezer.

For more on the efficient storage of your frozen food follow the link below:

https://www.safefood.net/food-storage/freezing

Defrosting & cleaning your appliance

De-frost your appliance as required to ensure the maximum efficiency.

A build up of frost/ice will reduce the efficiency of the freezer.

Unplug your appliance to defrost.

Your appliance should be allowed to defrost at normal room temperature.

Do not use the sharp or metal objects to remove ice when defrosting as this can damage the appliance.

Use warm water & a non-abrasive detergent to clean your freezer. This should be done after every defrost.

Dry and clean the unit with a soft cloth after defrosting.

Notes

It is not recommended to use an extension lead with this appliance. If power supply cable becomes damaged only use a qualified electrician. If the unit is unplugged, power lost or turned off, allow five minutes before restarting the unit.

Additional Information

For more information on this product please use the link: <u>https://eprel.ec.europa.eu/screen/product/refrigeratingappliances2019/1948840</u>

Warranty

Your Adamo appliance is covered by a 1-year warranty

Spare Parts:

Should at any stage in the future you require spare parts please follow the link below or contact our customer service dept 01 8241688:

http://edl.ie/spare-parts-service/

At the time of placing this appliance on the market the list below of spare parts are available for professional repairers & end-users:

Door hinges (7 years), Shelves (7 Years) & Door Gaskets (10 years)

Two years after placing this appliance on the market the list below of spare parts are available for 7 years to professional repairers:

Thermostats, Temperature sensors, printed circuit boards & light sources.

For a list of repair professionals select the links below:

https://www.repairmystuff.ie/repair-directory/

https://nationalappliancerepairs.ie/

Recycling

When this appliance has reached the end of its life cycle please return it to your local electrical retailer for disposal. This will allow for the safe & environmental disposal of the appliance as per the WEEE Ireland guidelines.

Use the link below to find your nearest authorized WEEE retailer: https://www.weeeireland.ie/household-recycling/where-can-i-recycle/

Effective Distribution Ltd. are a member of WEEE Ireland. Registration no: 00498W

