


REFRIGERATOR

Model: BL50C/BL50CBL

INSTRUCTION MANUAL

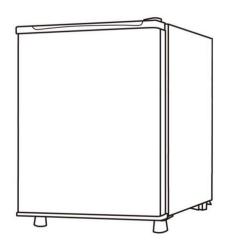

DEAR CUSTOMER


Thank you for purchasing the Adamo Table Top Fridge.

Please read this manual carefully, and keep it for future reference.

Table of Contents

Overview of Appliance3
Unpacking your appliance4
Setting up your appliance4
Thermostat Setting5-6
Specifications6
Cleaning & Maintenance7
Trouble Shooting & Tips7
Tips for energy savings8
Hints & tips on refrigerated food storage8-9
Additional Information9
Warranty9
Spare Parts9
Recycling10

Parts

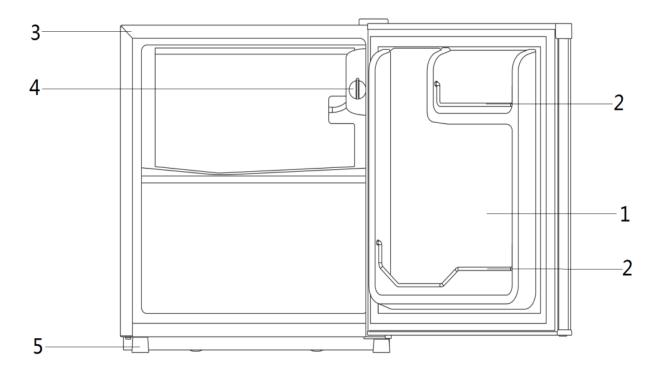

- 1) Door with lock & keys.
- 2) Door shelf x 2.
- 3) Refrigerator housing.
- 4) Thermostat control dial
- 5) Height adjustable feet.

Unpacking your appliance


- Make sure that the refrigerator is in the upright position as per markings on box.
- Cut off the packing band, and then lift up the cardboard outer box over the appliance.
- Remove packaging from under the appliance.
- Remove packing tape from inside the appliance.
- Always dispose of packaging as per recycling guidelines.

Setting up your appliance

- The refrigerator should be placed on a flat and solid surface in the upright position. Use the adjustable feet where necessary to make sure the refrigerator is level.
- Place the appliance away from the direct sunlight and sources of heat.
- It is necessary to leave a distance of at least 100mm of space from the back and sides of the unit to allow the proper ventilation of the compressor. This appliance is designed for freestanding & should only be used as such. This appliance is not intended to be used as a built-in appliance.
- Never handle the appliance by the power cable as this will damage the appliance. Always remove plug from socket in the correct manner.
- Never use an extension lead or plug adaptor. If you need to extend the power supply cable, only use a qualified electrician.
- Allow 24 hours after installation before using.
- Make sure that your appliance is not resting on the power cord.
- This appliance is designed for indoor use only.
- This appliance is intended to be used at ambient temperatures ranging from 16 to 43 degrees Celsius.

Thermostat Setting

- The thermostat automatically regulates the inside temperature of the refrigerator compartment. By rotating the knob from position « 1 » to « 7 », colder temperatures can be obtained. (1 being low and 7 being high)
- « 0 » position shows thermostat is closed and no cooling is available.
- For short-term storage of food in the refrigerator compartment, you can set the knob between minimum and medium position. (1-4)
- For long-term storage of food in the refrigerator compartment, you can set knob between (4-7)
- Note that: the ambient temperature, (the temperature of the freshly stored food and how often the door is opened) affects the temperature in the refrigerator compartment. If required, change the temperature setting.
- When you first switch on the appliance, for starting suitable cooling, the appliance should work 24 hours continuously until it cools down to sufficient temperature.
- During this time do not open the door frequently.
- If the unit is switched off or unplugged, you must allow at least 5
 minutes before restarting or re-plugging the unit in, in order not to
 damage the compressor.
- Your appliance operates from 0 +4 degrees Celsius.
- The optimum temperature for your appliance is + 4 Degrees Celsius.

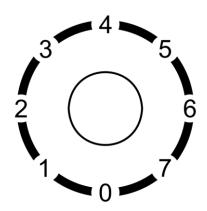

Your fridge is designed to operate in the ambient temperature intervals stated in the associated standards, according to the climate class stated on the information label. We do not recommend operating your fridge out of stated temperatures, value limits in terms of cooling effectiveness.

Climate Class:

N - Temperate	(+16 to +32) Degrees Celsius
ST - Subtropical	(+16 to +38) Degrees Celsius
T – Tropical	(+16 to +43) Degrees Celsius

Specifications

Energy efficiency performance rating: E Energy consumption: 80 kWh/year

Net Fridge Capacity: 46L

Airborne acoustical noise emissions (dB(A) re 1 pW) 38

Compartments x 1/Fixed door racks x 2/Removable glass shelf x 1

Reversible Door

Adjustable thermostat

Adjustable feet

Dimensions (CMs): (H)490 x (W)470 x (D)443

Voltage: 220 – 240V Frequency: 50Hz

Cleaning & Maintenance

- Disconnect the appliance from the power supply before cleaning.
- Do not pour water directly over or on the appliance.
- The refrigerator compartment should be cleaned periodically using a solution of bicarbonate of soda and lukewarm water.
- Do not use abrasive products, detergents or soaps.
- After cleaning wipe down with a damp clean cloth.
- Note: Reconnect to the power after you have dried your hands.

Trouble Shooting & Tips

What to do...

When the appliance is not in use for a prolonged period of time:

Remove the power plug from the power supply.

Remove all contents from the appliance.

Dry the interior and leave the door open for a few days.

When you wish to move the appliance:

Secure all movable parts and contents. (Package them separately if necessary.) Transport only in an upright position.

If the appliance seems too warm inside:

Check that the door has not been opened too frequently or for a long period.

Check that the interior circulation is not obstructed by having the appliance overloaded. Did you store anything hot, without first cooling it to room temperature?

Is there sufficient clearance around all sides and above the appliance?

If the appliance starts making any unusual noises:

Is it wobbling or unsteady. Re-level it and check if it now operates normally. Have any objects fallen behind the cooler? If so, remove them and check if the operation is now normal. Are any containers inside the cooler vibrating or resonating? If so, rearrange them then check to see if operation has returned to normal.

Tips for energy savings

- Try not to open the door too often, especially when the weather is wet and hot.
- Once you open the door, close it as soon as possible.
- Every now and then check if the appliance is sufficiently ventilated (adequate air circulation around the appliance).
- Set thermostat from higher to lower settings whenever possible (depends on how loaded the appliance is & the ambient temperature etc.).
- Before loading the appliance with packages of fresh foods, make sure they are cooled to ambient temperature.
- For hot foods, please cool to room temperature before placing in the appliance.

Hints & tips on refrigerated food storage:

How long can I keep food in the fridge for.?

The storage instructions on the labels of food products should be followed and food that needs to be refrigerated should be put in the fridge as soon as possible after purchasing. Leftovers should be kept covered (sealed storage containers/cling film/tin foil) in the fridge and used within 2-3 days. In addition, it is good practice to clear out the fridge on a regular basis to ensure that any out-of-date foods are discarded.

How long can I keep defrosted food in the fridge before cooking it?

Once the food is fully defrosted, it is best to cook it straight away. Once cooked, it can be stored in the fridge again (for 2-3 days) or frozen.

Where should raw meats be stored in my fridge?

Raw meats are a potential source of food poisoning bacteria and must be kept separate from cooked or ready-to-eat food at all times. To avoid any possibility of cross-contamination of cooked foods with raw foods in your fridge, it is important to always store raw meat, fish and poultry on the bottom shelf of your fridge, with cooked foods stored above them. This will prevent any drip from the raw meats from contaminating the cooked/ready-to-eat foods.

Where to store different food types in your refrigerator:

Top Shelf

It's a little warmer at the top of your fridge, so foods that don't need cooking are best put here such as cooked/cured meats, pre-cooked meals, dairy products, fruit & vegetables.

Bottom Shelf

The bottom shelf of your refrigerator is the coldest so this is the best place for raw meat or fish.

Door Racks

This is the warmest part of your refrigerator, so items with natural preservatives like jams & condiments are best kept here. Beverages are also best kept here.

Additional Information

For more information on the BL50CBL product please use the link: https://eprel.ec.europa.eu/screen/product/refrigeratingappliances2019/1948839

For more information on the BL50C product please use the link: https://eprel.ec.europa.eu/screen/product/refrigeratingappliances2019/1948819

Warranty

Your Adamo appliance is covered by a 1-year warranty

Spare Parts:

Should at any stage in the future you require spare parts please follow the link below or contact our customer service dept on 01 8241688 between 9:00am & 5:30pm Monday to Friday:

http://edl.ie/spare-parts-service/

At the time of placing this appliance on the market the list below of spare parts are available for professional repairers & end-users:

Door handles (7 years), Door hinges (7 years), Shelves (7 Years) & Door Gaskets (10 years)

Two years after placing this appliance on the market the list below of spare parts are available for 7 years to professional repairers:

Thermostats, Temperature sensors, printed circuit boards & light sources. For a list of repair professionals select the links below:

https://www.repairmystuff.ie/repair-directory/

https://nationalappliancerepairs.ie/

Recycling

When this appliance has reached the end of its life cycle, please return it to your local electrical retailer for disposal. This will allow for the safe & environmental disposal of the appliance as per the WEEE Ireland guidelines.

Use the link below to find your nearest authorized WEEE retailer: https://www.weeeireland.ie/household-recycling/where-can-i-recycle/

Effective Distribution Ltd. are a member of WEEE Ireland. Registration no: 00498W



-