 




WINE & Beverage COOLER

User Manual

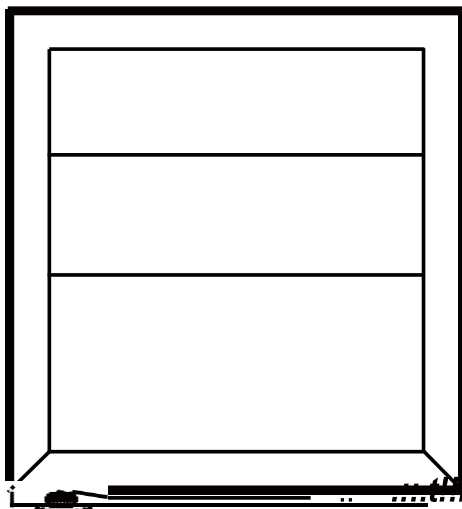

Model: JC-50

Thank you for purchasing the Adamo Table Top Wine/Beverage cooler.
Please read this manual carefully, and keep it for future reference.

GENERAL SAFETY RULES

 
- 1) **Read all of the instructions before using this appliance.**
- 2) Use this appliance only for its intended purpose as described in this use and care guide.
- 3) This appliance must be properly installed in accordance with the installation instructions before it is used. See grounding instructions in the installation section.
- 4) Never unplug your appliance by pulling on the power cord. Always grasp the plug firmly and pull straight out from the outlet.
- 5) Repair or replace immediately, all electric service cords that have become frayed or otherwise damaged. Do not use a cord that shows cracks or abrasion damage along its length, the plug or the connector end. Only use a qualified electrician to carry out any repairs.
- 6) Unplug the appliance before cleaning or before making any repairs. Note: If for any reason this product requires service or repairs only used a qualified repair agent.
- 7) This appliance should not be recessed or built-in, in an enclosed cabinet. It is designed for freestanding installation only.
- 8) Your beverage & wine cooler was NOT designed to store perishable foods. Store only plastic/glass bottles or tinned beverages.
- 9) This appliance is not suitable for use by children of eight years or younger.

SAVE THESE INSTRUCTIONS



Risk of child entrapment. Before you recycle your old appliance, take off the doors. Leave the shelves in place so that children may not easily climb inside.

Wine & Beverage Cooler Introduction

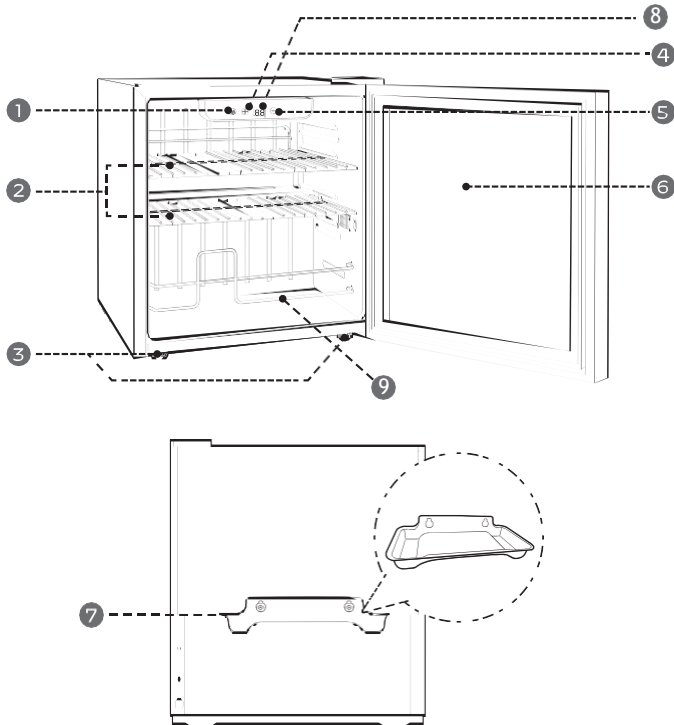

1. Touch Control Light On/off
2. Wire Shelves
3. Adjustable Legs
4. Temp Increase Button
5. Temp Reduce Button
6. Glass Door
7. Rear Drip Tray
8. Led Temperature Display
9. Removable Wire Drawer

Right side door opening installation (The door can be changed to the left side)

Unpacking Your Countertop Refrigerator

- Remove all packaging material. before powering on your refrigerator. This includes the foam base and all adhesive tape holding the Countertop Refrigerator accessories inside and outside. Dispose of packaging as per in an environmentally friendly manner.

Leveling Your Countertop Refrigerator

- Your Countertop Refrigerator has two leveling legs which are located in the front corners. After properly placing your Countertop Refrigerator in its final position, you can level your Countertop Refrigerator.
- Leveling legs can be adjusted by turning them clockwise to lower your Countertop Refrigerator or by turning them counterclockwise to raise your Countertop Refrigerator. The Countertop Refrigerator door will close more easily when the two front leveling legs are extended slightly.

Proper Air Circulation

- To ensure that your Countertop Refrigerator works at the maximum efficiency it was designed for, you should install it in a location where there is proper air circulation and electrical connections.
- The following are recommended clearances around the Countertop Refrigerator:
 - Sides.....2" (50mm)
 - Top.....2" (50mm)
 - Back.....2" (50mm)
- Do not over fill your Countertop Refrigerator for proper cooling.

Note: If your Countertop Refrigerator has been tilted for any reason, wait 24 hours before plugging it in.

Drip Tray

- Ensure the drip tray in the rear of the unit is in the proper position.

WARNING: ELECTRICAL REQUIREMENT - SHOCK HAZARD

Electrical Requirement

- Avoid the use of 3 Pin adapters. This is a dangerous practice since it provides no effective grounding for the Appliance and may result in shock hazard.

Installation Limitations

- Do not install your Appliance in any location not properly insulated or heated (e.g., garage etc.). Your Countertop Appliance was designed to operate in ambient temperature settings between 10° - 38 degrees Celsius.
- Select a suitable location for the appliance on a hard even surface away from direct sunlight or heat source (e.g., radiators, baseboard heaters, cooking appliances, etc.). Any surface unevenness should be corrected with the leveling legs located on the front and rear bottom corners of the appliance.
- Your appliances is designed for freestanding installation only. It is not designed for built-in application. **Note:** This unit is for indoor use only.

Use of Extension Cord

- Avoid the use of an extension cord because of potential safety hazards under certain conditions. If it is necessary to use an extension cord, use only a 3-wire extension cord that has a 3-blade grounding plug and a 3-slot outlet that will accept the plug. The marked rating of the extension cord must be equal to or greater than the electrical rating of the appliance.

Shelving (See Fig. #2)

To remove or replace a full-width slide-out shelf:

1. Gently **tilt** the shelf up and slide forward until the shelf has been completely removed.
2. To replace the shelf, gently slide the shelf back.

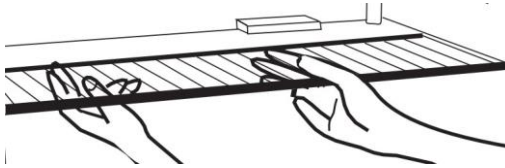 


Fig. #2

Normal Operating Sounds You May Hear

- Boiling water, gurgling sounds or slight vibrations that are the result of the refrigerant circulating through the cooling coils.
- Compressor makes operational sounds when cycling on and

Proper Care & Cleaning

Cleaning and Maintenance

To avoid electric shock, always unplug your appliance before cleaning.

Before using cleaning products, always read and follow manufacturer's instructions and warnings to avoid personal injury or product damage.

Prepare a cleaning solution of 3-4 tablespoons of baking soda mixed with warm water. Use sponge or soft cloth, dampened with the cleaning solution, to wipe down your appliance.

Rinse with clean warm water and dry with a soft cloth.

Do not use harsh chemicals, abrasives, ammonia, chlorine bleach, concentrated detergents, solvents or metal scouring pads. Some of these chemicals may dissolve, damage and/or discolor your Countertop Refrigerator.

Clean door gaskets every 3 months. Gaskets must be kept clean.

Defrosting Your Countertop Refrigerator

Your appliance is designed with a manual defrost system. The appliance surfaces will defrost, when the unit is unplugged. Water from the unit is disposed of automatically, by means of being channeled onto a drip tray located on the compressor. Heat transfer from the compressor causes this water to evaporate.

Power Interruptions

Occasionally there may be power interruptions due to thunderstorms or other causes. Remove the power cord from AC outlet when a power outage occurs. When power has been restored, plug power cord to AC outlet.

Vacation and Moving Care

For long vacations or absences, empty contents from appliance, unplug the unit and clean the appliance and door gaskets according to "General cleaning" section.

Prop doors open, so air can circulate inside.

Troubleshooting

Appliance Does Not Operate

- Check if the appliance is plugged in.
- Check if there is power at the ac outlet, by checking the circuit breaker.
- Check temperature dial is not at 0.

Temperature appears too warm

- Frequent door openings.
- Allow time for recently added beverages to reach proper temperature.
- Check gaskets for proper seal.
- Adjust temperature control to cooler setting.

Temperature is too cold

- If temperature control setting is too cold, adjust to a warmer setting and allow several hours for temperature to adjust.

Appliance runs too frequently

- This may be normal to maintain constant temperature during high temperature and humid days.
- Doors may have been opened frequently or for an extended period of time.
- Check gasket for proper seal.
- Check to see if doors are completely closed.

Moisture build up on interior or exterior of the Appliance

- This is normal during high humidity periods.
- Prolonged or frequent door openings.
- Check door gaskets for proper seal.

Appliance door does not shut properly

- Level the Countertop Refrigerator.
- Check for blockages.

Your fridge is designed to operate in the ambient temperature intervals stated in the associated standards, according to the climate class stated on the information label. We do not recommend operating your fridge out of stated temperatures, value limits in terms of cooling effectiveness.

Climate Class:

N

ST

SN

Specifications

Energy efficiency performance rating: E

Energy consumption: 100 (kWh/annum)

Net Fridge Capacity: 46

Airborne acoustical noise emissions (dB(A) re 1 pW) 43

Compartments x 1 / 2 x adjustable wire shelves/1 x Removeable wire basket

Reversible Door

Adjustable thermostat

Adjustable feet

Dimensions (mm): (H)498 x (W) 445x (D)465

Voltage: 220 – 240V Frequency: 50Hz

Additional Information

For more information on the JC-50 product please use the link:

Warranty

Your Adamo appliance is covered by a 1-year warranty.

Spare Parts:

Should at any stage in the future you require spare parts please follow the link below or contact our customer service dept on 01 8241688 between 9:00am & 5:30pm Monday to Friday:

<http://edl.ie/spare-parts-service/>



Recycling

When this appliance has reached the end of its life cycle, please return it to your local electrical retailer for disposal. This will allow for the safe & environmental disposal of the appliance as per the WEEE Ireland guidelines.

Use the link below to find your nearest authorized WEEE retailer:

<https://www.weeeireland.ie/household-recycling/where-can-i-recycle/>

Effective Distribution Ltd. are a member of WEEE Ireland.

Registration no: 00498W